

METER SWITCH POSITIONS

| | | |
|---|-----------|--------------|
| 1 | R S-UNITS | T: RFO |
| 2 | R S-UNITS | T: AALC |
| 3 | R S-UNITS | T: SCREEN MA |

S2 SHOWN IN RFO/S

FUNCTION SWITCH POSITIONS

| | |
|---|------|
| 1 | CW |
| 2 | TUNE |
| 3 | USB |
| 4 | LSB |


S3 SHOWN IN CW

OPERATION SWITCH POSITION

| | |
|---|-----------------------|
| 1 | OFF (POWER OFF) |
| 2 | REC (RECEIVE) |
| 3 | MOX (MANUAL XMIT PTT) |
| 4 | VOX (AUTOMATIC XMIT) |


S4 SHOWN IN OFF

155-000348B

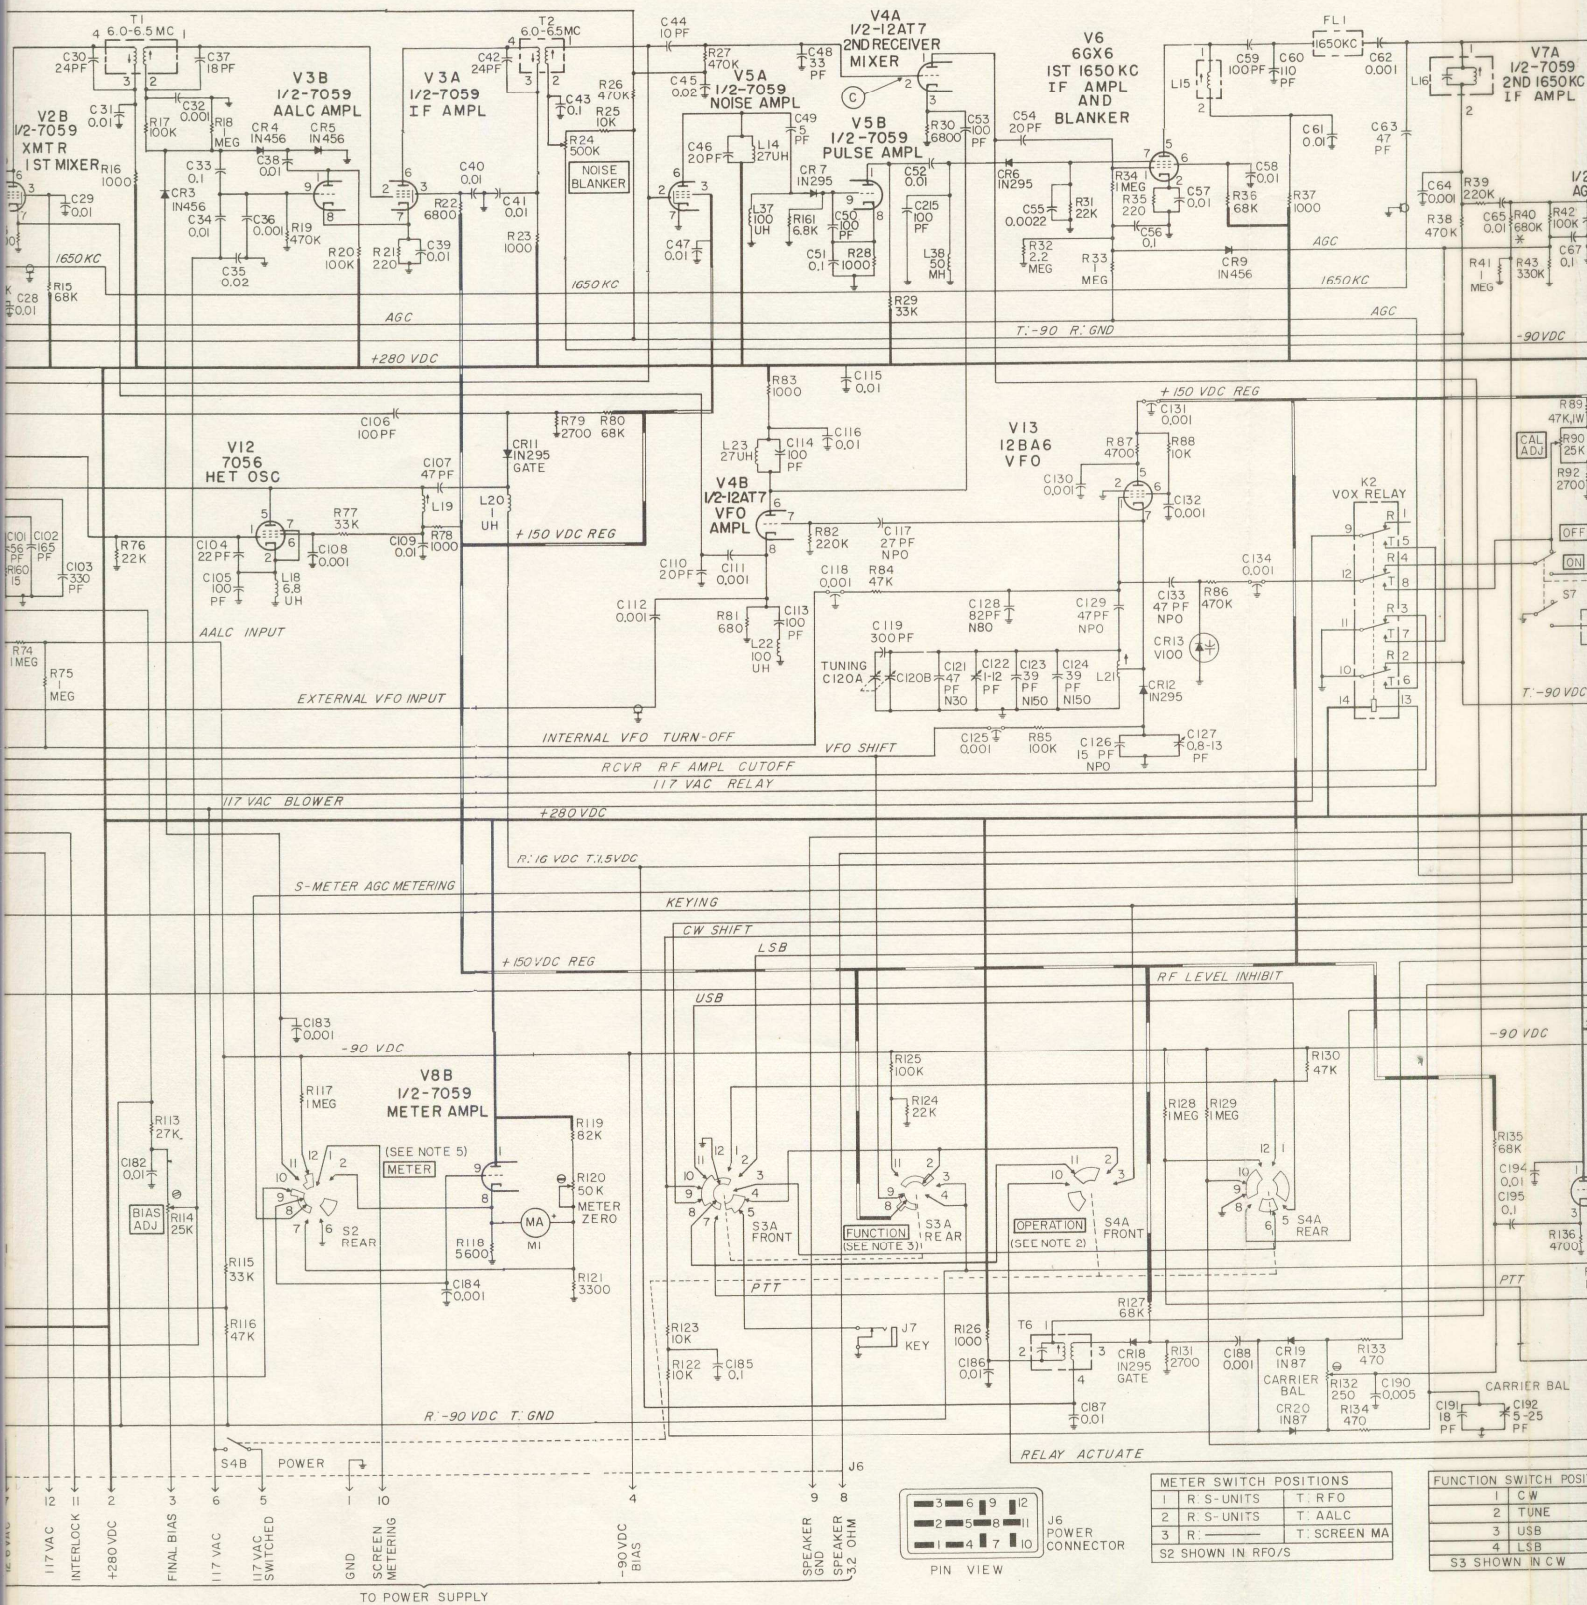


| METER SWITCH POSITIONS | |
|------------------------|--------------|
| 1 R S-UNITS | T: RFO |
| 2 R S-UNITS | T: AALC |
| 3 R | T: SCREEN MA |
| S2 SHOWN IN RFO/S | |


| FUNCTION SWITCH POSITIONS | |
|---------------------------|--|
| 1 CW | |
| 2 USB | |
| 4 LSB | |
| S3 SHOWN IN CW | |

 

TO POWER SUPPLY

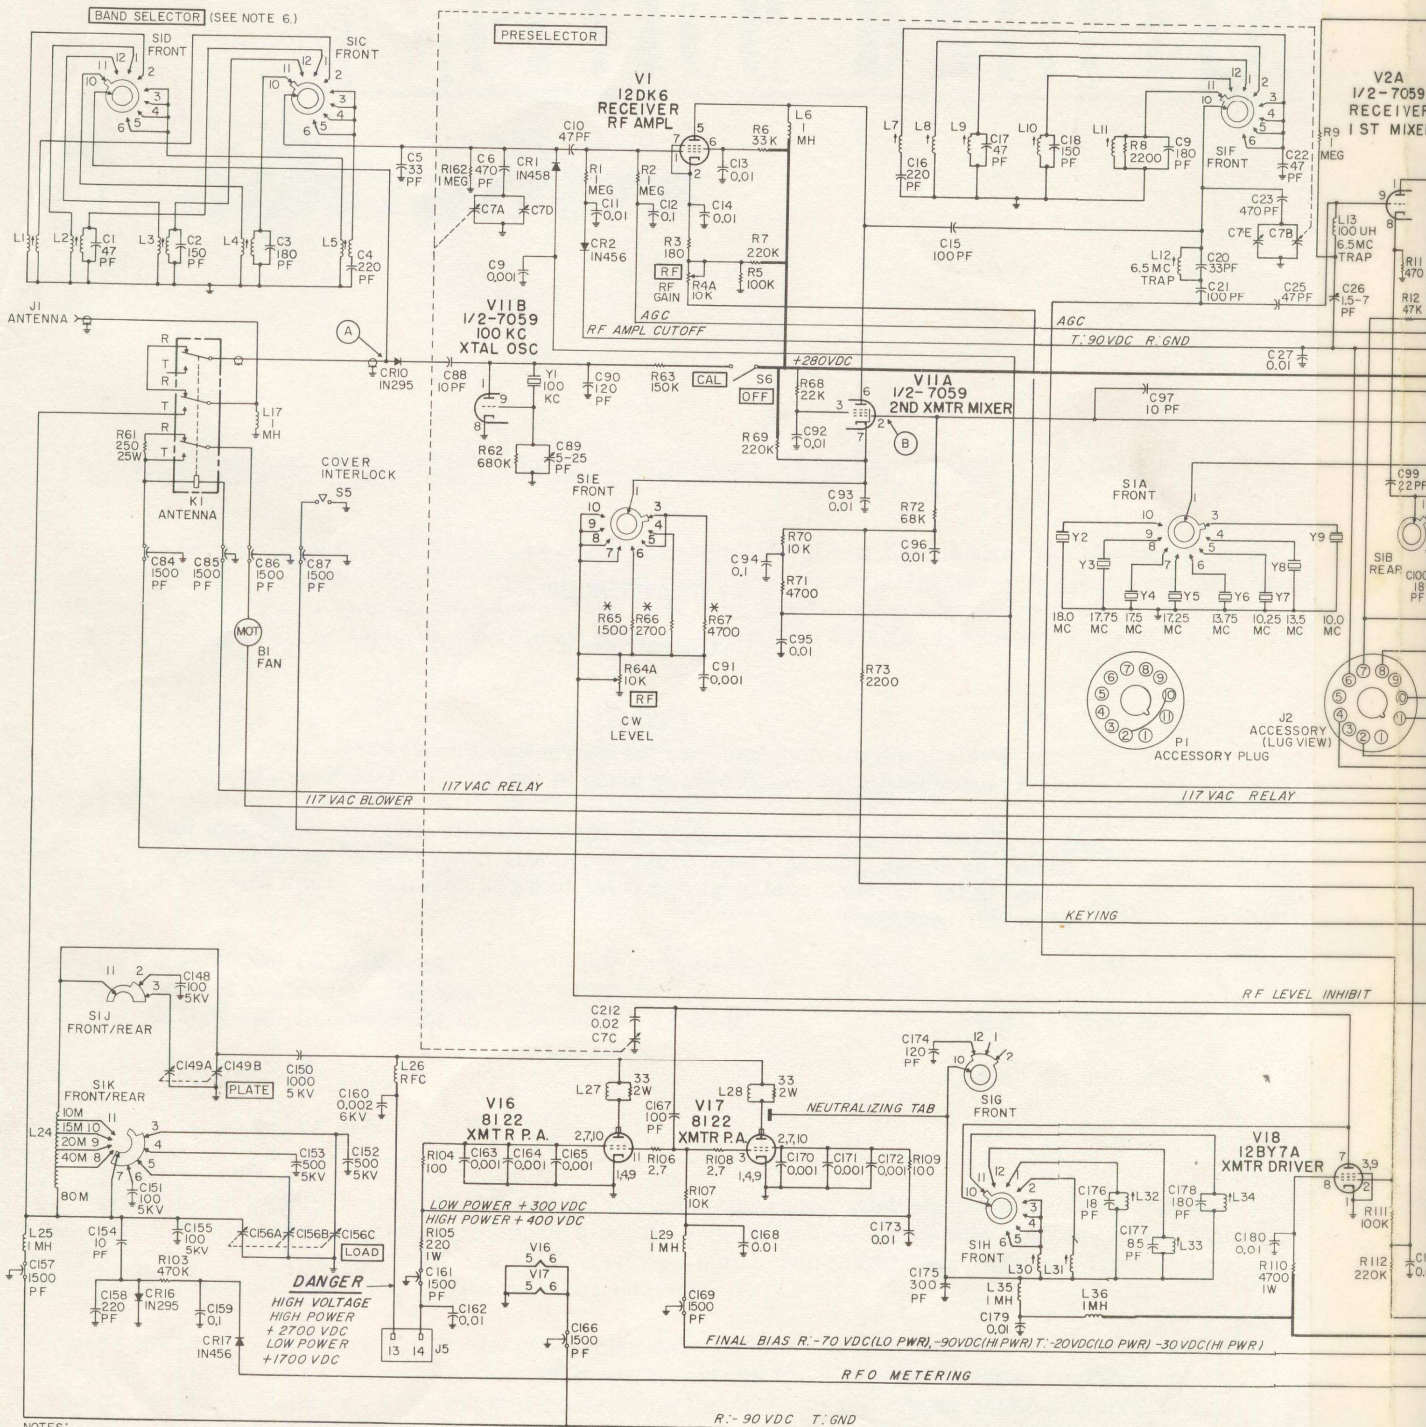

- NOTES:
1. UNLESS OTHERWISE SPECIFIED, ALL RESISTORS ARE IN OHMS, 10%, 1/2 WATT.
 2. ALL CAPACITORS ARE IN UF (SEE PARTS LIST FOR VOLTAGE RATING).
 3. OPERATION SWITCH (S4) IS SHOWN IN OFF (FULL CCW) POSITION.
 4. FUNCTION SWITCH (S3) IS SHOWN IN CW (FULL CCW) POSITION.
 5. BAND SELECTOR (S1) IS SHOWN IN 3.5 MC (FULL CCW) POSITION.
 6. METER SWITCH (S2) IS SHOWN IN S/RFO (FULL CCW) POSITION.
 7. ALL WAFERS OF BAND SELECTOR (S1) ARE MECHANICALLY GANGED.
 8. RELAYS ARE SHOWN IN RECEIVE CONDITION.
 9. RESISTANCE MAY VARY FROM VALUE SHOWN, IF REPLACEMENT IS NECESSARY, USE SAME VALUE AS PART REMOVED.

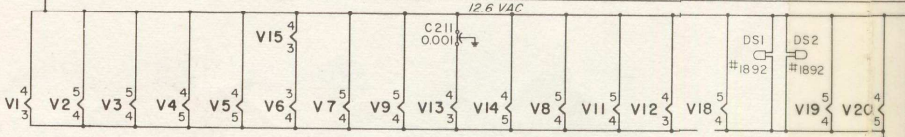

ERRATA SHEET

MODEL SR-2000

Prior to production, but after the Instruction Manual was printed, certain wiring and component changes were made in the Model SR-2000 Transceiver.

These changes are contained in the schematic diagram and parts list herein enclosed. Please discard the schematic diagram and parts list contained in the Instruction Manual and refer to those contained within this sheet whenever necessary.

Part Number 094-904488
Pack with Instruction Manual
Part Number 094-904120

10 1/2 W x 4 1/2 W x 1 W